







### Parts List

- 1 - (B) Back Assembly
- 2 - Armrest Assemblies


### Hardware

- 2 - 3 1/2" Stainless Wafer Bolt
- 2 - 2 1/2" Stainless Wafer Bolt
- 6 - 2" Stainless Wafer Bolt
- 4 - 2" Screws
- 1 - 5/32 Hex Key

**Tools Required**  
 5/32 Hex Key (Included)  
 #2 Square Drive Bit (Not Included)

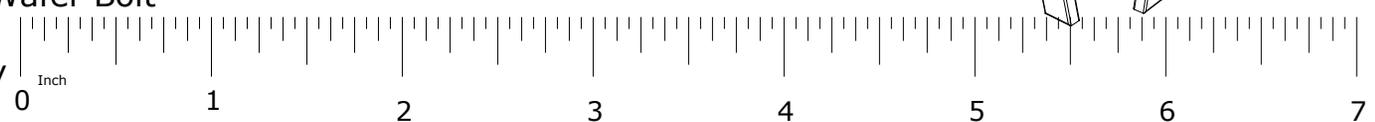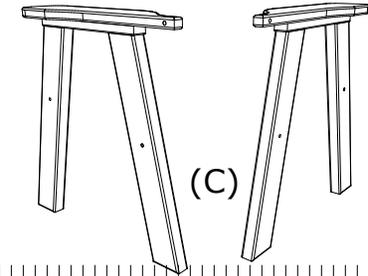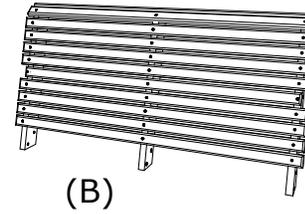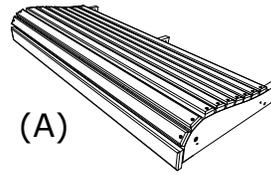


**1.** Assemble (B) Back Assembly to (A) Seat Assembly using 4 - 2" Wafer Bolts, Tighten with included Hex Key. Be sure to match all numbers & or letters.

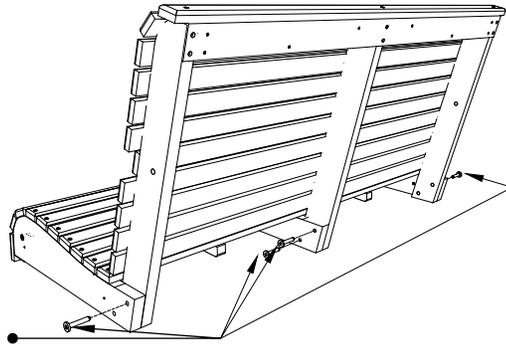

2" Stainless Wafer Bolt

**2.** Assemble (C) Armrest Assemblies using 1 - 3 1/2" Wafer Bolt, 1 - 2 1/2" Wafer Bolt  
 1 - 2" Wafer Bolt per side, Tighten with included Hex Key. Be sure to match all numbers & or letters.

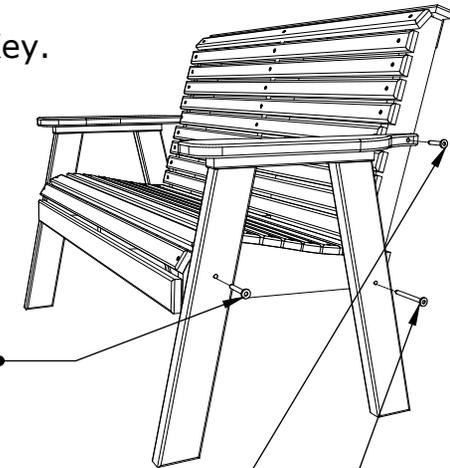


2 1/2" Stainless Wafer Bolt

2" Stainless Wafer Bolt

3 1/2" Stainless Wafer Bolt

**3.** Install 2 - 2" Screws per side from inside of seat in predrilled holes.

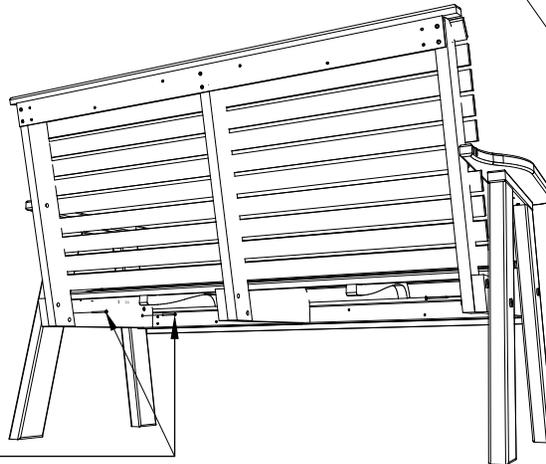

2" Screw



4' Plain Poly Bench Assembly Instructions

10/13/ 2017

R.M.