



Tools Required


- 5/32 Hex Key (Included)
- #2 Square Drive Bit (Not Included)

Parts List


- 2 - (A) Armrest Assembly
- 2 - (B) Back Legs
- 1 - (C) Seat Assembly
- 1 - (D) Back Assembly

Hardware


- 4 - 5/16" x 3" Stainless Wafer Bolts
- 2 - 5/16" x 2 1/2" Stainless Wafer Bolts
- 2 - 5/16" x 2" Stainless Wafer Bolts
- 10 - 2" Screws
- 1 - 5/32" Hex Key

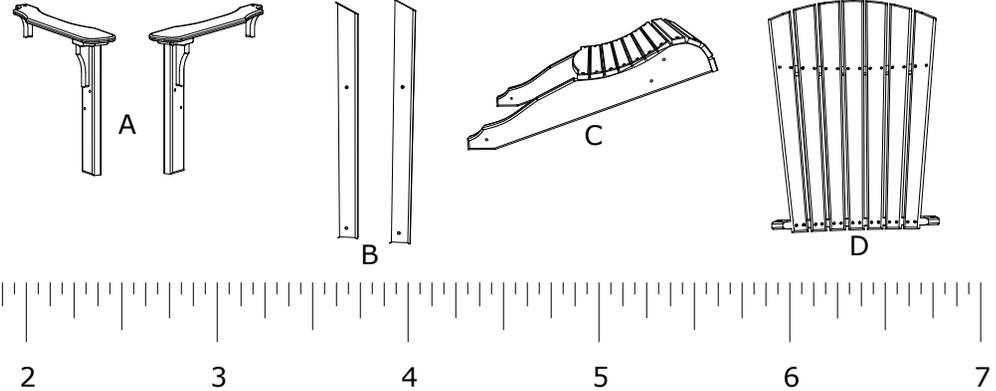


1. Attach (A) Armrest Assembly to (C) Seat Assembly Using 2 - 3" Wafer Bolts per side, Tighten Wafer Bolts with included Hex Key, Be sure to match all numbers & or letters.

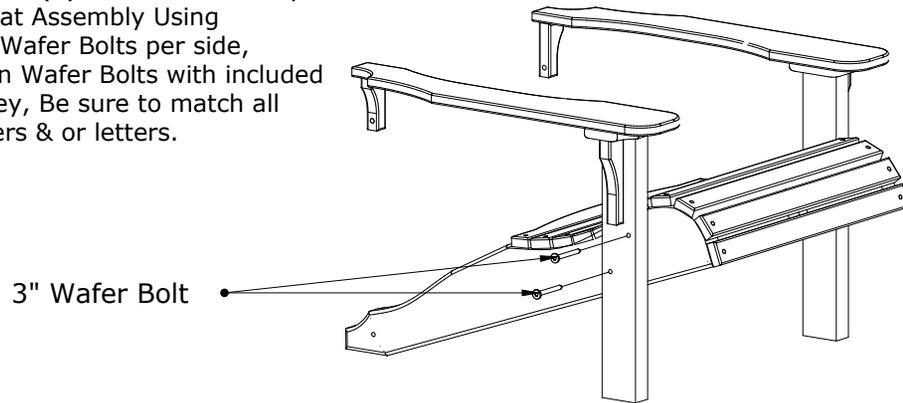

2. Attach (B) Back Legs using 1 - 2-1/2" Wafer Bolt 1 - 2" Wafer Bolt & 1 - 2" Screw per side Tighten Wafer Bolts with included Hex Key, be sure to match all numbers & or letters.

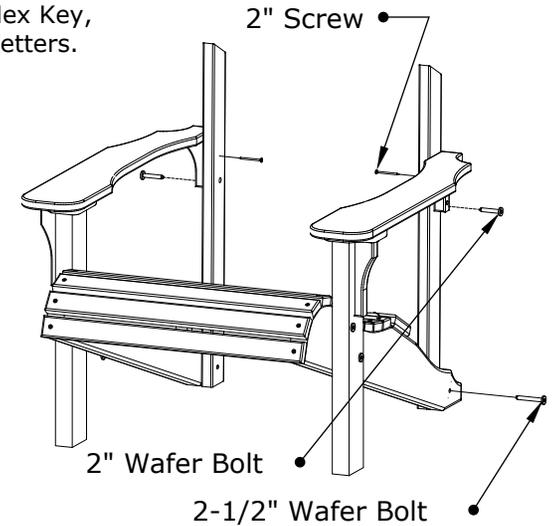

3. Attach (D) Back Assembly to (B) Back Legs & (C) Seat Assembly using 4 - 2" Screws per side, be sure to match all numbers & or letters.

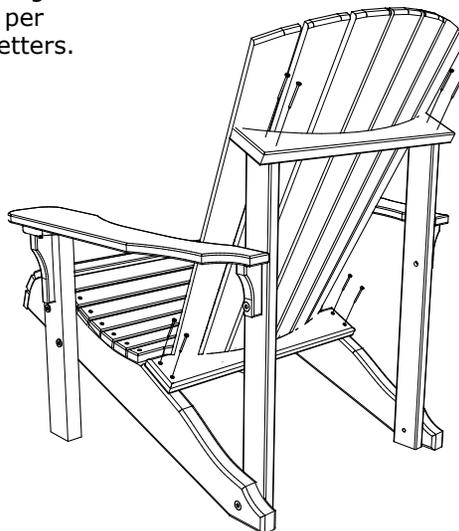

Deluxe Adirondack Chair Assembly Instructions

10/16/ 2017

R.M.